
REVOLUTION BY REAPER™
SIDE JET REBUILD INSTRUCTIONS

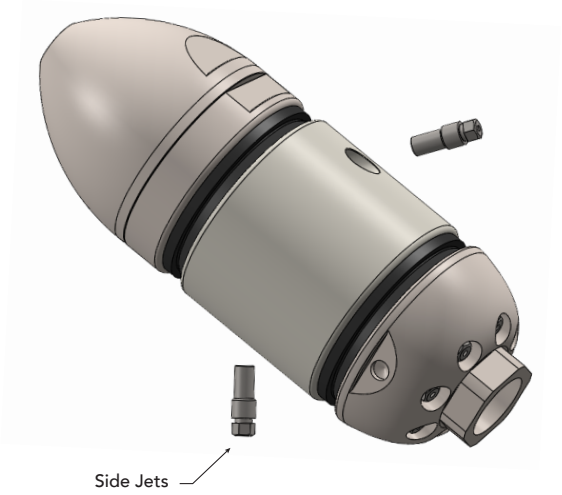

Tools & Equipment needed:

- 5/16" Hex Wrench
- (2) Side Jets
  Part number:
  12.0: 1003571

---

1. Remove both side jets using a 5/16" hex wrench and discard.

2. Install the new jets using the 5/16" hex wrench and tighten 1.5-3 turns past finger tight.

hydraflexinc.com
952-808-3640
hello@hydraflexinc.com

HYDRA-FLEX FLUID INNOVATION